
INSTALLATION INSTRUCTIONS ROMAN TUB 3 VALVE AND TRIM

Valve Model No's: I-571 Trim Kit for Model No's: 3-2547

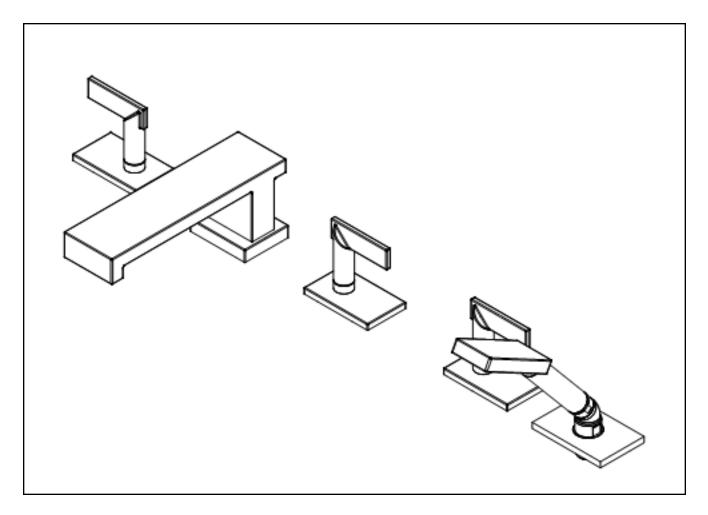

NEWPORT BRASS

2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.NEWPORTBRASS.COM


Rough in valve Installation

Recommended Installation by a Professional Plumbing Contractor

Note: Use plumbers tape or equivalent to seal all threaded joints. Plumb with 3/4" copper pipe is recommended.

Warning: To prevent severe damage to valve body, any solder/braze process must be performed a min. of 4" from ports.

- Install the Spout quick connect Deck Flange through spacer and appropriate hole of mounting surface. Secure with washer nut. See Figure 1
- Note: Spout Nipple is installed in the Deck Flange for safe keeping until the trim is to be installed.
- 2. Place washer nut on valve body. Insert body, (blue cold & red hot), through hole from below mounting surface. See Figure 1.
- 3. Thread Inverted Flange Nut onto top portion of valve until it bottoms out. This will ensure the correct stem height mounting surface. Secure into place by tightening lower washer nut. See Figure 1.
- 4. Apply thread sealant (e.g. plumbers tape) to hand shower adapter's male threads and tighten onto diverter valve body.
- 5. Remove upper flange nut and install diverter body from underside of deck. Reattach upper flange nut onto diverter valve. Note: place flange nut on finished deck surface, see Figure 1a.
- 6. Secure diverter valve body to deck by tightening lower flange nut.
- 7. Cut diverter stem to 1-1/4" from deck. Cut all thread 1/2" shorter than stem
- 8. Install hand shower deck flange housing though hole on finished deck surface, install rubber and steel washer and secure with flange nut.
- 9. Place plastic hose guide onto lower portion of housing threads.
- 10. Feed braided hand shower hose through deck flange and attach one end of hose into the hand shower outlet of diverter valve. See Figure 2.
- II. Attach hot/cold supply lines to appropriate valve body. See Figure 2.
- 12. The outlet from each valve body must be joined (ie. mixed) then attached to inlet at bottom of diverter valve.
- 13. Connect 3/4" side outlet of diverter valve to tub spout fitting as shown in Figure 2.

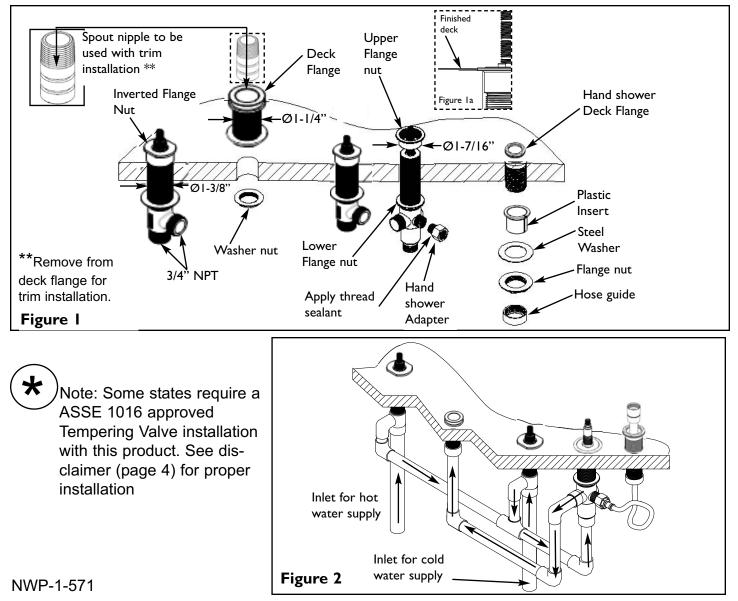


Trim Installation

Note:

To achieve desired handle rotational alignment, the cartridge MUST be tightened in a clockwise rotation only. (Cartridge Bonnet factory torque is 14-16 ft-lbs.)

- I. Place escutcheon over valve stem. Secure handle assembly into place by first engaging the valve stem, then position and hold the handle lever while rotating the bonnet. Any adjustments for rotational alignment must be made to the valve body, not to the cartidge. See Fig 3.
- 2. Apply plumbers tape to spout nipple and install into base of spout. Insert spout and nipple into deck flange. Make sure spout bottoms out onto quick connect spout and then secure in place with setscrews. See Fig. 3.
- 3. Install plastic insert into hand shower escutcheon.
- 4. Turn on water supply, check for leaks and make any final adjustments required.

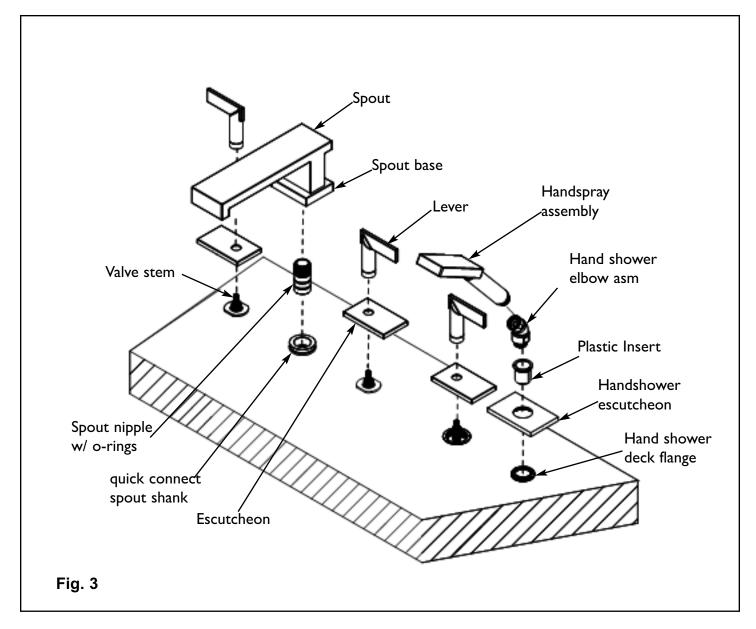

Disclaimer Regarding Brasstech Roman Tub with Hand Spray

To conform to local codes and ordinances, all Brasstech Roman tub with hand spray products should be used in concert with an ASSE 1016 approved tempering value to reduce the hot water supply to a safe temperature not exceeding 110°F (43°C). **Important:** Water temperatures in excess 110°F (43°C) are dangerous and may cause scalding, severe injury of death!

Tempering valve should be installed and adjusted by a licensed contractor per the valve manufacturer installation instruction, and in accordance with local codes and ordinances. In general, key characteristics to ensure a tempering valve to work best with Brasstech Roman tub with hand spray products shall be as follows:

- Tempering valve should be used prior to the Roman tub product to reduce the hot water supply to a safe temperature.
- To ensure sufficient water flow through the tub spout, tempering valve should be capable to handle a flow rate of 10 gpm or more.
- Tempering valve should include inlet filter washer and check valves in both the hot and cold water inlets to protect against cross flow.

Pressure - Temperature - Flow Rate

Minimum supply pressure static: 30psi (207 kPa) Inlet temperature: hot inlet, 120°F – 180°F (49°C – 82°C) cold inlet, 39°F – 85°F (4°C – 29°C) Temperature out: Field range: 80°F -120°F (27°C – 49°C), adjustable. Accurate within +/-3°F (1.7°C) Maximum temperature: 200°F (93°C) Maximum pressure: 150psi (10.3 bar) Minimum flow: 0.5 gpm (1.9 lpm) @ 0.8psi (0.55 kPa) Maximum flow: 20 gpm (76 lpm) @ 125psi (862 kPa)

*Note: Valve should be installed in a location where it is accessible for cleaning or service. Due to the effects of various water conditions, periodic verification of outlet water temperature is required.

