KOHLER_®

C3®-230 Elongated Cleansing Toilet Seat K-4108

Features

- In-line heater provides continuously heated water for consistent comfort.
- Front and rear wash modes provide warm water for cleansing.
- Adjustable water temperature and water pressure.
- Choose oscillating or pulsating spray.
- Touchscreen remote control with two programmable user presets.
- Stainless steel wand with UV-light self-sanitization.
- Heated seat with five temperature settings.
- LED lighting illuminates the bowl to serve as a night-light.
- Warm-air drying system with adjustable air speed and temperature.
- Carbon filter for odor control.
- Quiet-Close[™] lid closes slowly and quietly without slamming.
- Quick-Release[™] hinges allow seat to be unlatched from toilet for easy removal and convenient cleaning; no tools required.
- Grip-Tight bumpers hold seat firmly in place.
- Ergonomically designed for comfortable seating.

Material

Plastic

Installation

- Fits most elongated toilets.
- Requires a dedicated circuit electrical outlet.

Included Components

Additional Components: Remote Supply hose



Codes/Standards

ASME A112.4.2/CSA B45.16 UL 1431 CSA C22.2 No. 64 CSA C22.2 No. 68

KOHLER[®] Intelligent Toilet and C3[®] Cleansing Seat Three-Year Limited Warranty

See website for detailed warranty information.

Available Colors/Finishes

Color tiles intended for reference only.


Color Code Description

0	White
96	Biscuit





C3®-230 Elongated Cleansing Toilet Seat K-4108

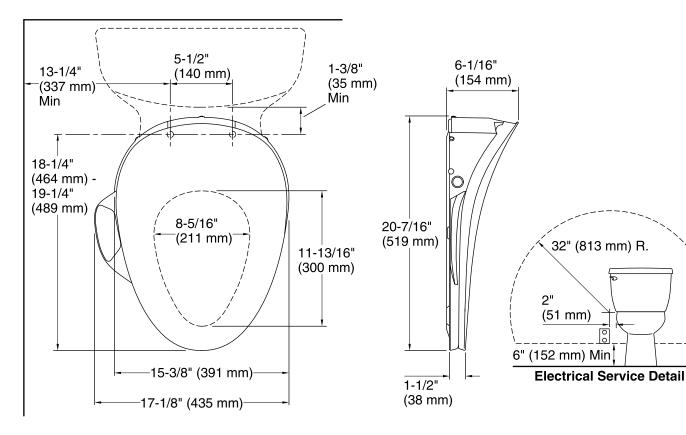

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI). Outside North America, this device may be known as a Residual Current Device (RCD).

120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.		
Elongated		
Closed-front		
5-1/2" (139 mm)		
46" (1168 mm)		

Notes

Install this product according to the installation guide.

Connect the seat to a cold water supply of drinking quality water at a pressure of 20 psi - 80 psi (139 kPa - 551 kPa).

Do not install this seat in a location where: (1) water might be splashed on the product or (2) excessive moisture, high humidity levels, or condensation is present. This will avoid damage to the electronic components.

Do not use an extension cord with this product.

To avoid possible product malfunction, do not plug in the seat until instructed to do so.

Locate the recepticle at least 6" (152 mm) above the floor, and within a 32" (813 mm) radius measured 2" (51 mm) from the bowl ledge.

